

ZAP Series 3 Technical Manual

Auto-Close Timer Temporary Defeat



Warning Electrical Shock Hazard

To prevent serious injury or death always ensure power is disconnected when wiring anything into the ZAP Controller.

To achieve the simplest method of defeating the auto-close timer it is best to install an 850 Beeper module.

Consult the 850 Beeper module page for installation instructions.

This function is only to be used to temporarily de-activate the auto-close timer when it is necessary to defeat the auto-close timer from timing out and closing the door for one particular cycle. This function is used for example, when it is necessary for the door to not close automatically after opening to receive a delivery or to hold the door open for ventilation purposes.

Note:

If the beeper module is not installed it will be necessary to open the case lid of the controller to view the acknowledge light. (Figure A)

To Defeat the auto-close timer for 1 cycle:

After the door has reached the fully open position and the operator has turned off.

Press and hold the STOP push button. (Figure B)

Next, press and hold the Close push button. (Figure B)

Release both buttons simultaneously after the 1st beep or flash of the acknowledge light.

To resume normal auto-close function:

Close the door by pressing the close push button.

The auto close function will automatically resume on the next operation.



Figure A



Figure B

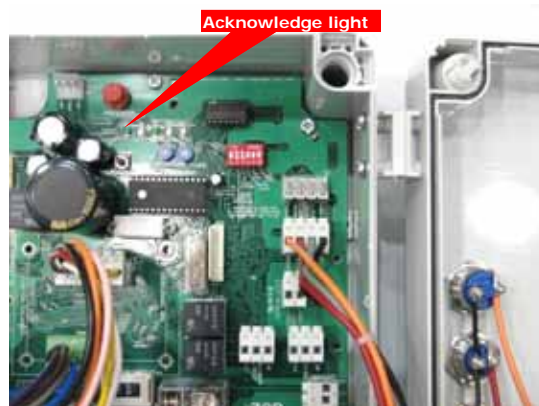


Figure C

ZAP Series 3 Simply Logical

ZAP Controls
100 Waterloo Blvd. Anglesey Business Park, Littleworth Road, Cannock, Staffordshire, England
UK Contact 011-44-154-387-9444 sales@zap-uk.com
USA Contact 931-510-4432 sales@zap-america.com
USA Tech Support 931-510-4432 via telephone or text
Online www.zap-uk.com