

# Series 3 Technician's Installation and Service Training Manual

## 850 Beeper Module Installation



### Warning Electrical Shock Hazard

To prevent serious injury or death always ensure power is disconnected when wiring anything into the ZAP Controller.

Materials required

850 Beeper Module (Figure A)

Locate the terminals labeled buzzer inside the controller. (Figure B)

Align the 850 Beeper module connector onto to the 3 pin buzzer connection.

Press into place ensuring that the module seats firmly into place. (Figure C)

The module 850 Beeper is now ready to use.



Figure A



Figure B



Figure B

### ZAP Series 3 Simply Logical

ZAP Controls  
100 Waterloo Blvd. Anglesey Business Park, Littleworth Road, Cannock, Staffordshire, England  
UK Contact 011-44-154-387-9444 sales@zap-uk.com  
USA Contact 931-510-4432 sales@zap-america.com  
USA Tech Support 931-510-4432 via telephone or text  
Online www.zap-uk.com